



4 SOLIDS™

GRAVITY DROP

NON-INVASIVE BULK SOLIDS CAPACITANCE MASS FLOW METER

Material Data Sheet: Polymer




Test Results


Test Data:

Test Number:	Mass Flow Rate: (lbs/s)	Volume Fraction: (%)	Relative Error: (%)
1	0.1827	2.45%	-0.09%
2	0.1802	2.39%	-1.23%
3	0.1810	2.39%	-1.73%
4	0.1811	2.46%	0.99%
5	0.1797	2.47%	2.04%


Test 1

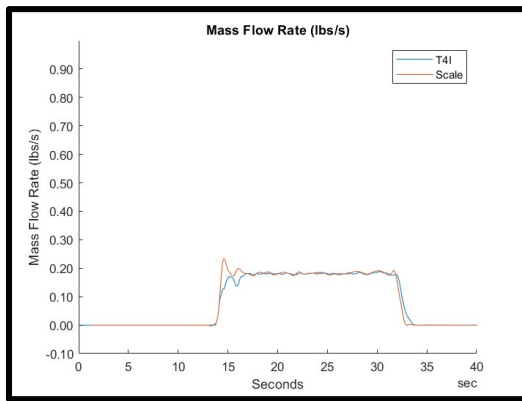


Test 2

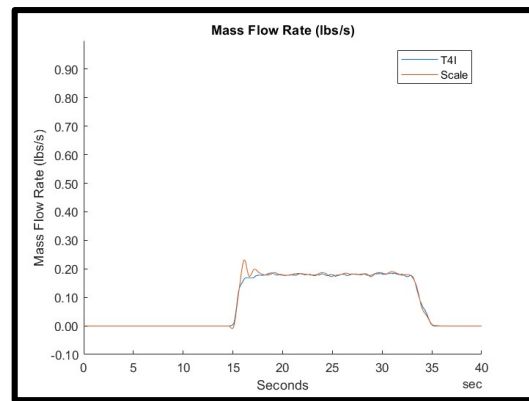

Test 3

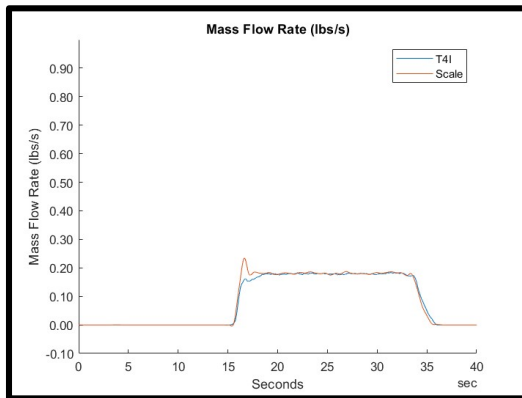

Test 4

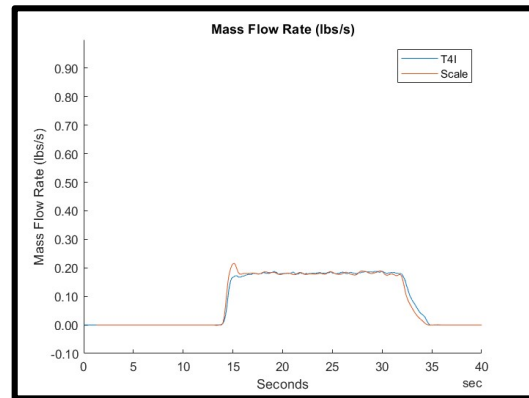

Test 5

