



SOLIDS™

GRAVITY DROP

NON-INVASIVE BULK SOLIDS CAPACITANCE MASS FLOW METER

Material Data Sheet: Flour




Test Results


Test Data:

Test Number:	Mass Flow Rate: (lbs/s)	Volume Fraction: (%)	Relative Error: (%)
1	0.0381	0.61%	-5.18%
2	0.0447	0.73%	-2.40%
3	0.0607	1.09%	6.79%
4	0.0527	0.89%	4.93%


Test 1

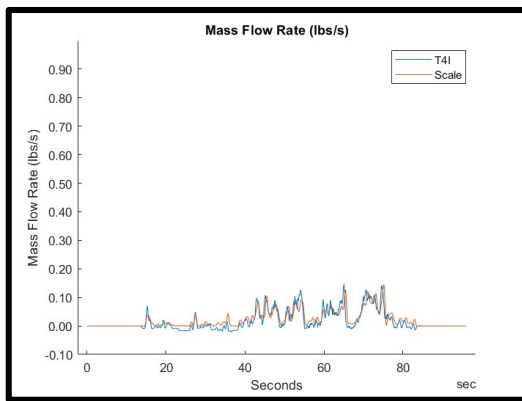

Test 2

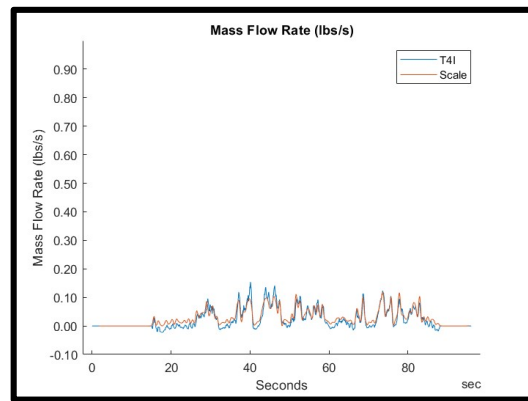

Test 3

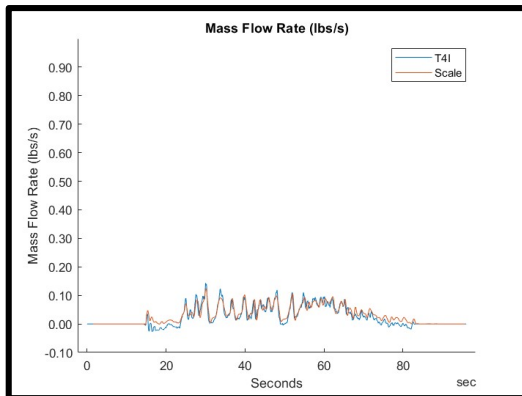

Test 4

