



SOLIDS™

GRAVITY DROP

NON-INVASIVE BULK SOLIDS CAPACITANCE MASS FLOW METER

Material Data Sheet: Cement




Test Results


Test Data:

<u>Test Number:</u>	<u>Mass Flow Rate: (lbs/s)</u>	<u>Volume Fraction: (%)</u>	<u>Relative Error: (%)</u>
1	0.0307	0.20%	6.77%
2	0.0523	0.31%	-2.80%
3	0.0557	0.33%	-1.62%
4	0.0820	0.49%	-2.35%


Test 1

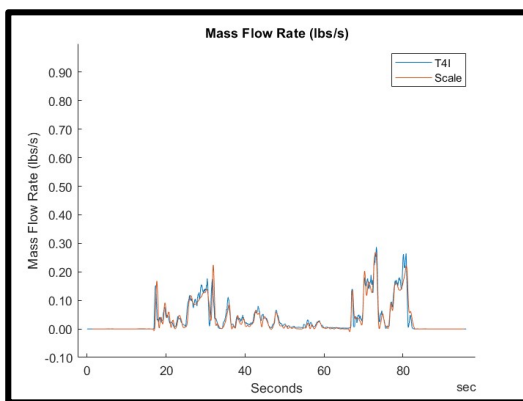

Test 2

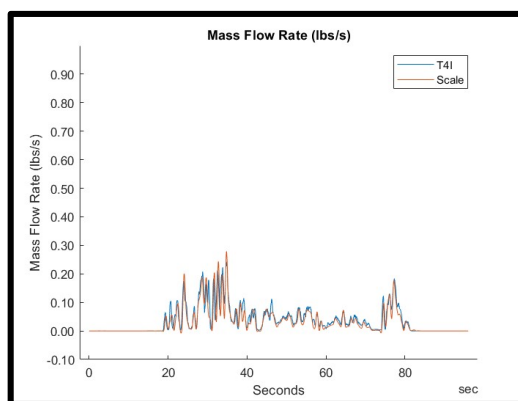

Test 3

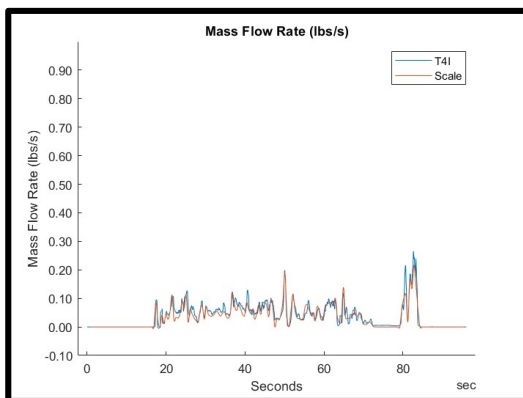

Test 4

